


ACRYLIC FLOORING SYSTEM

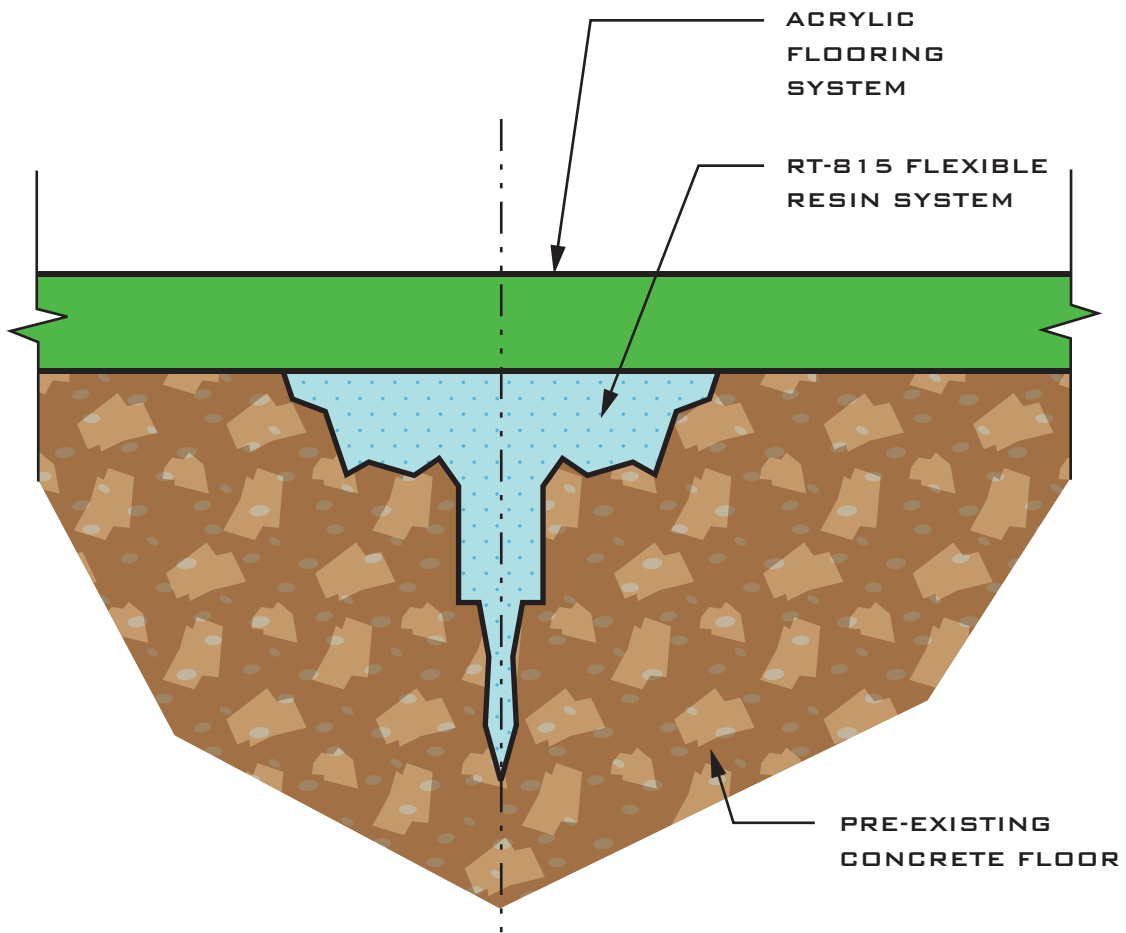

PROCESSES:

1. OPEN CRACK OR JOINT VIA CHIPPING AND/OR SAW CUTTING
2. PRIMING OF EXISTING CONCRETE
3. FILL CRACK OR JOINT WITH RT-815 FLEXIBLE RESIN SYSTEM
4. INSTALLATION OF ACRYLIC FLOORING SYSTEM